


SafeAvon Nutrient Testing Report: Hampton Lucy

SafeAvon Sites By Waterway

Avon River

. Hampton Lucy – Bridge

SafeAvon Locations in Hampton Lucy

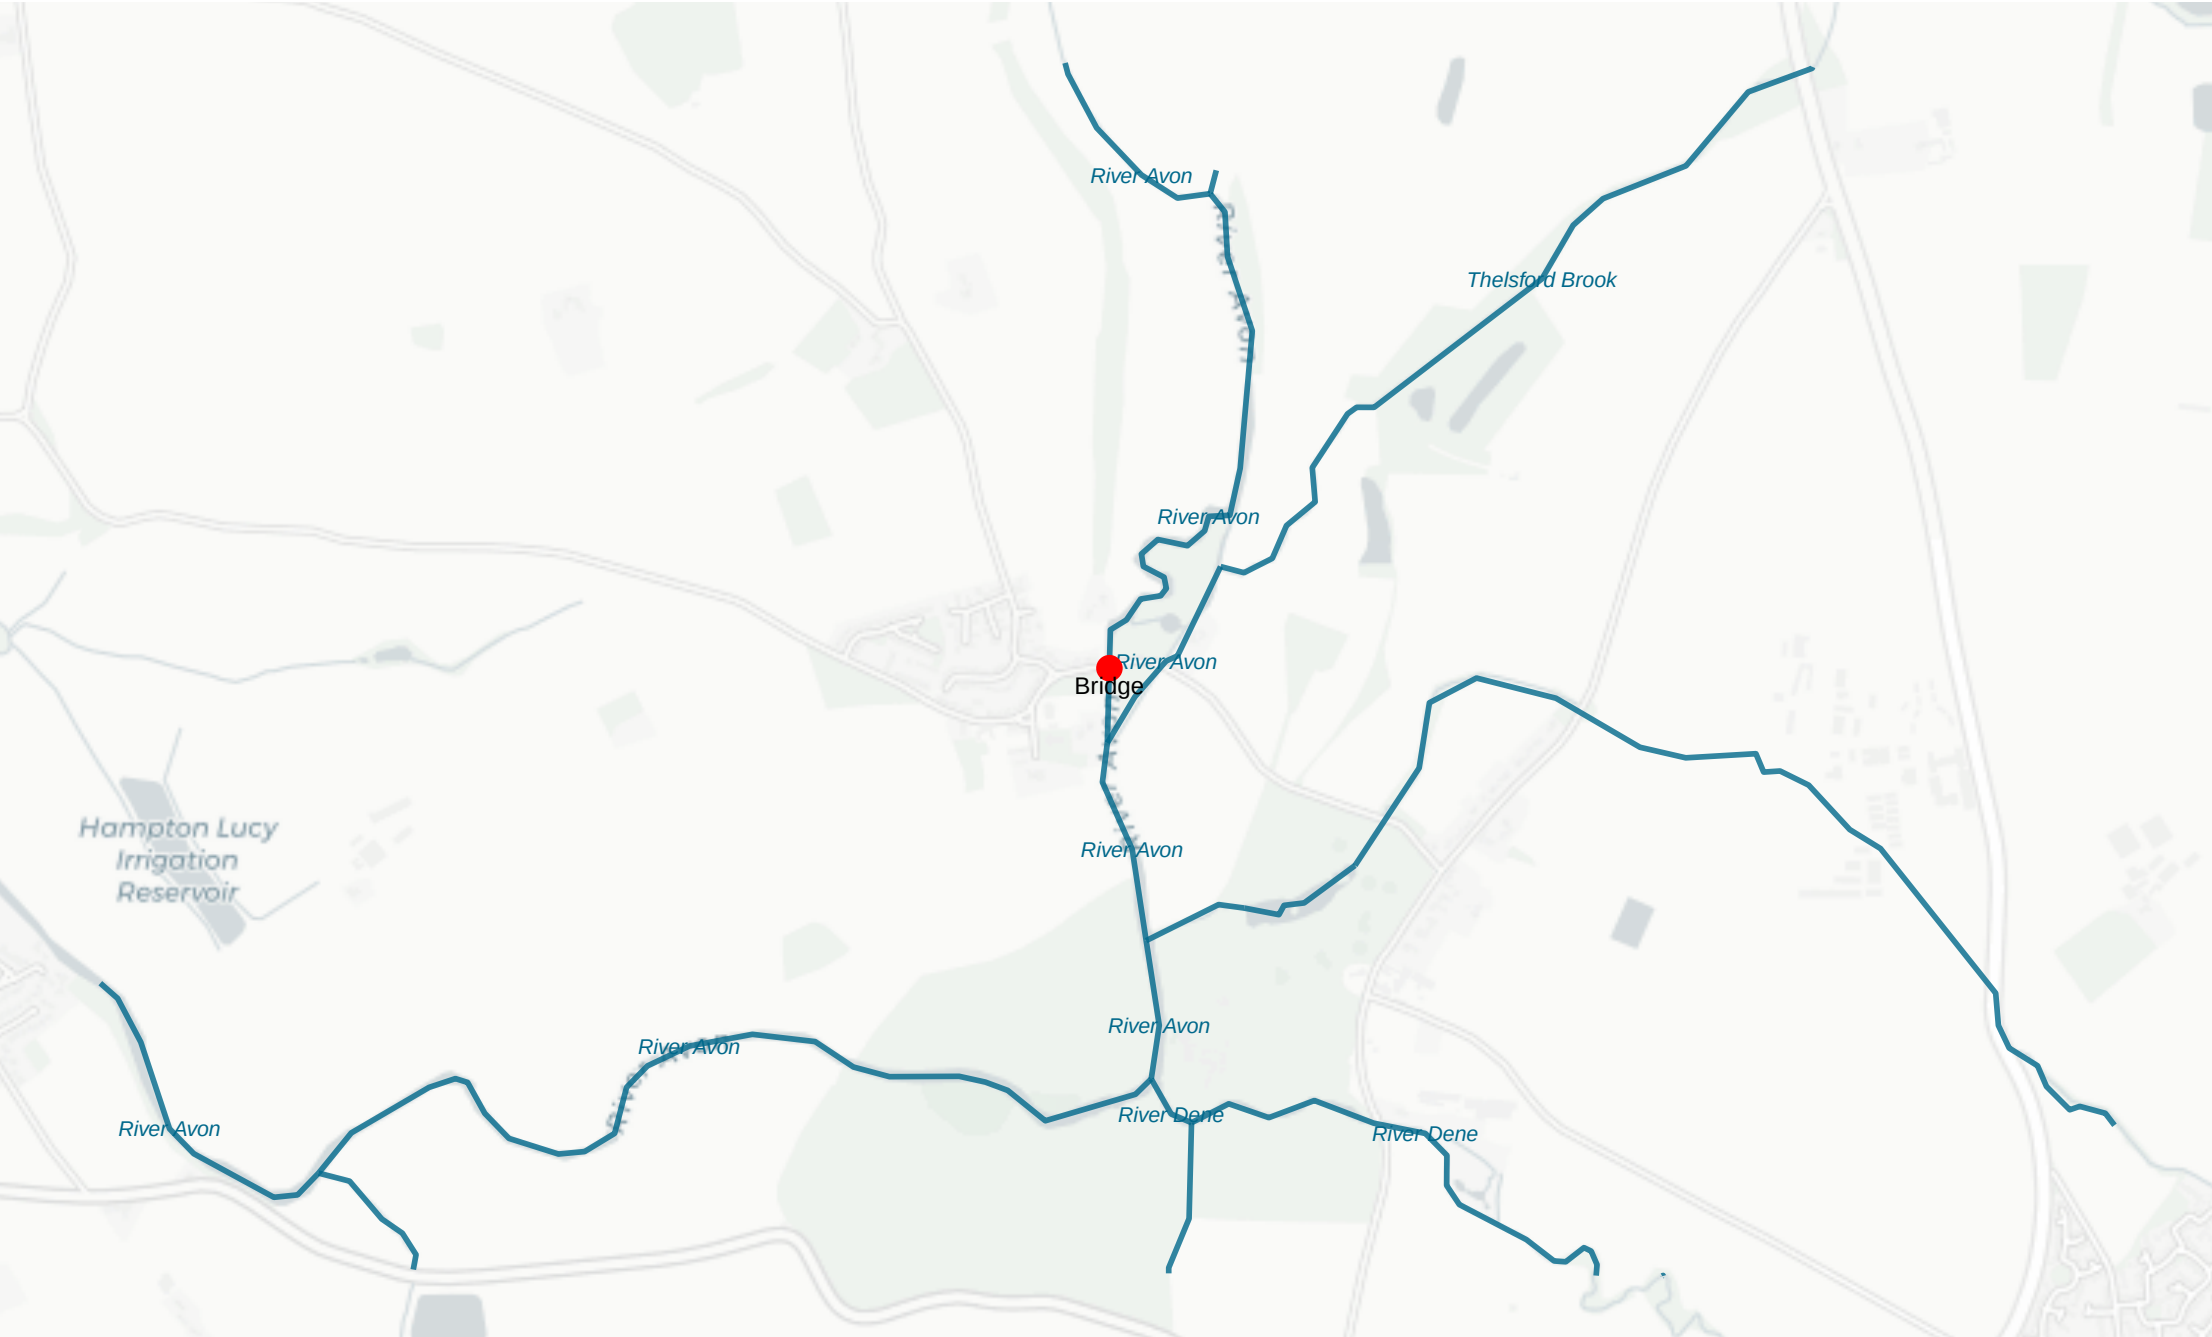


Summary for sites in Hampton Lucy

SITE	Start	Most Recent	Samples	Distinct Volunteers	Median Phosphates PPM	Median Nitrates PPM
Avon River – Hampton Lucy – Bridge	2023-07-16	2024-01-21	26	1	0.6	5

SafeAvon Phosphates – By Month

Hampton Lucy

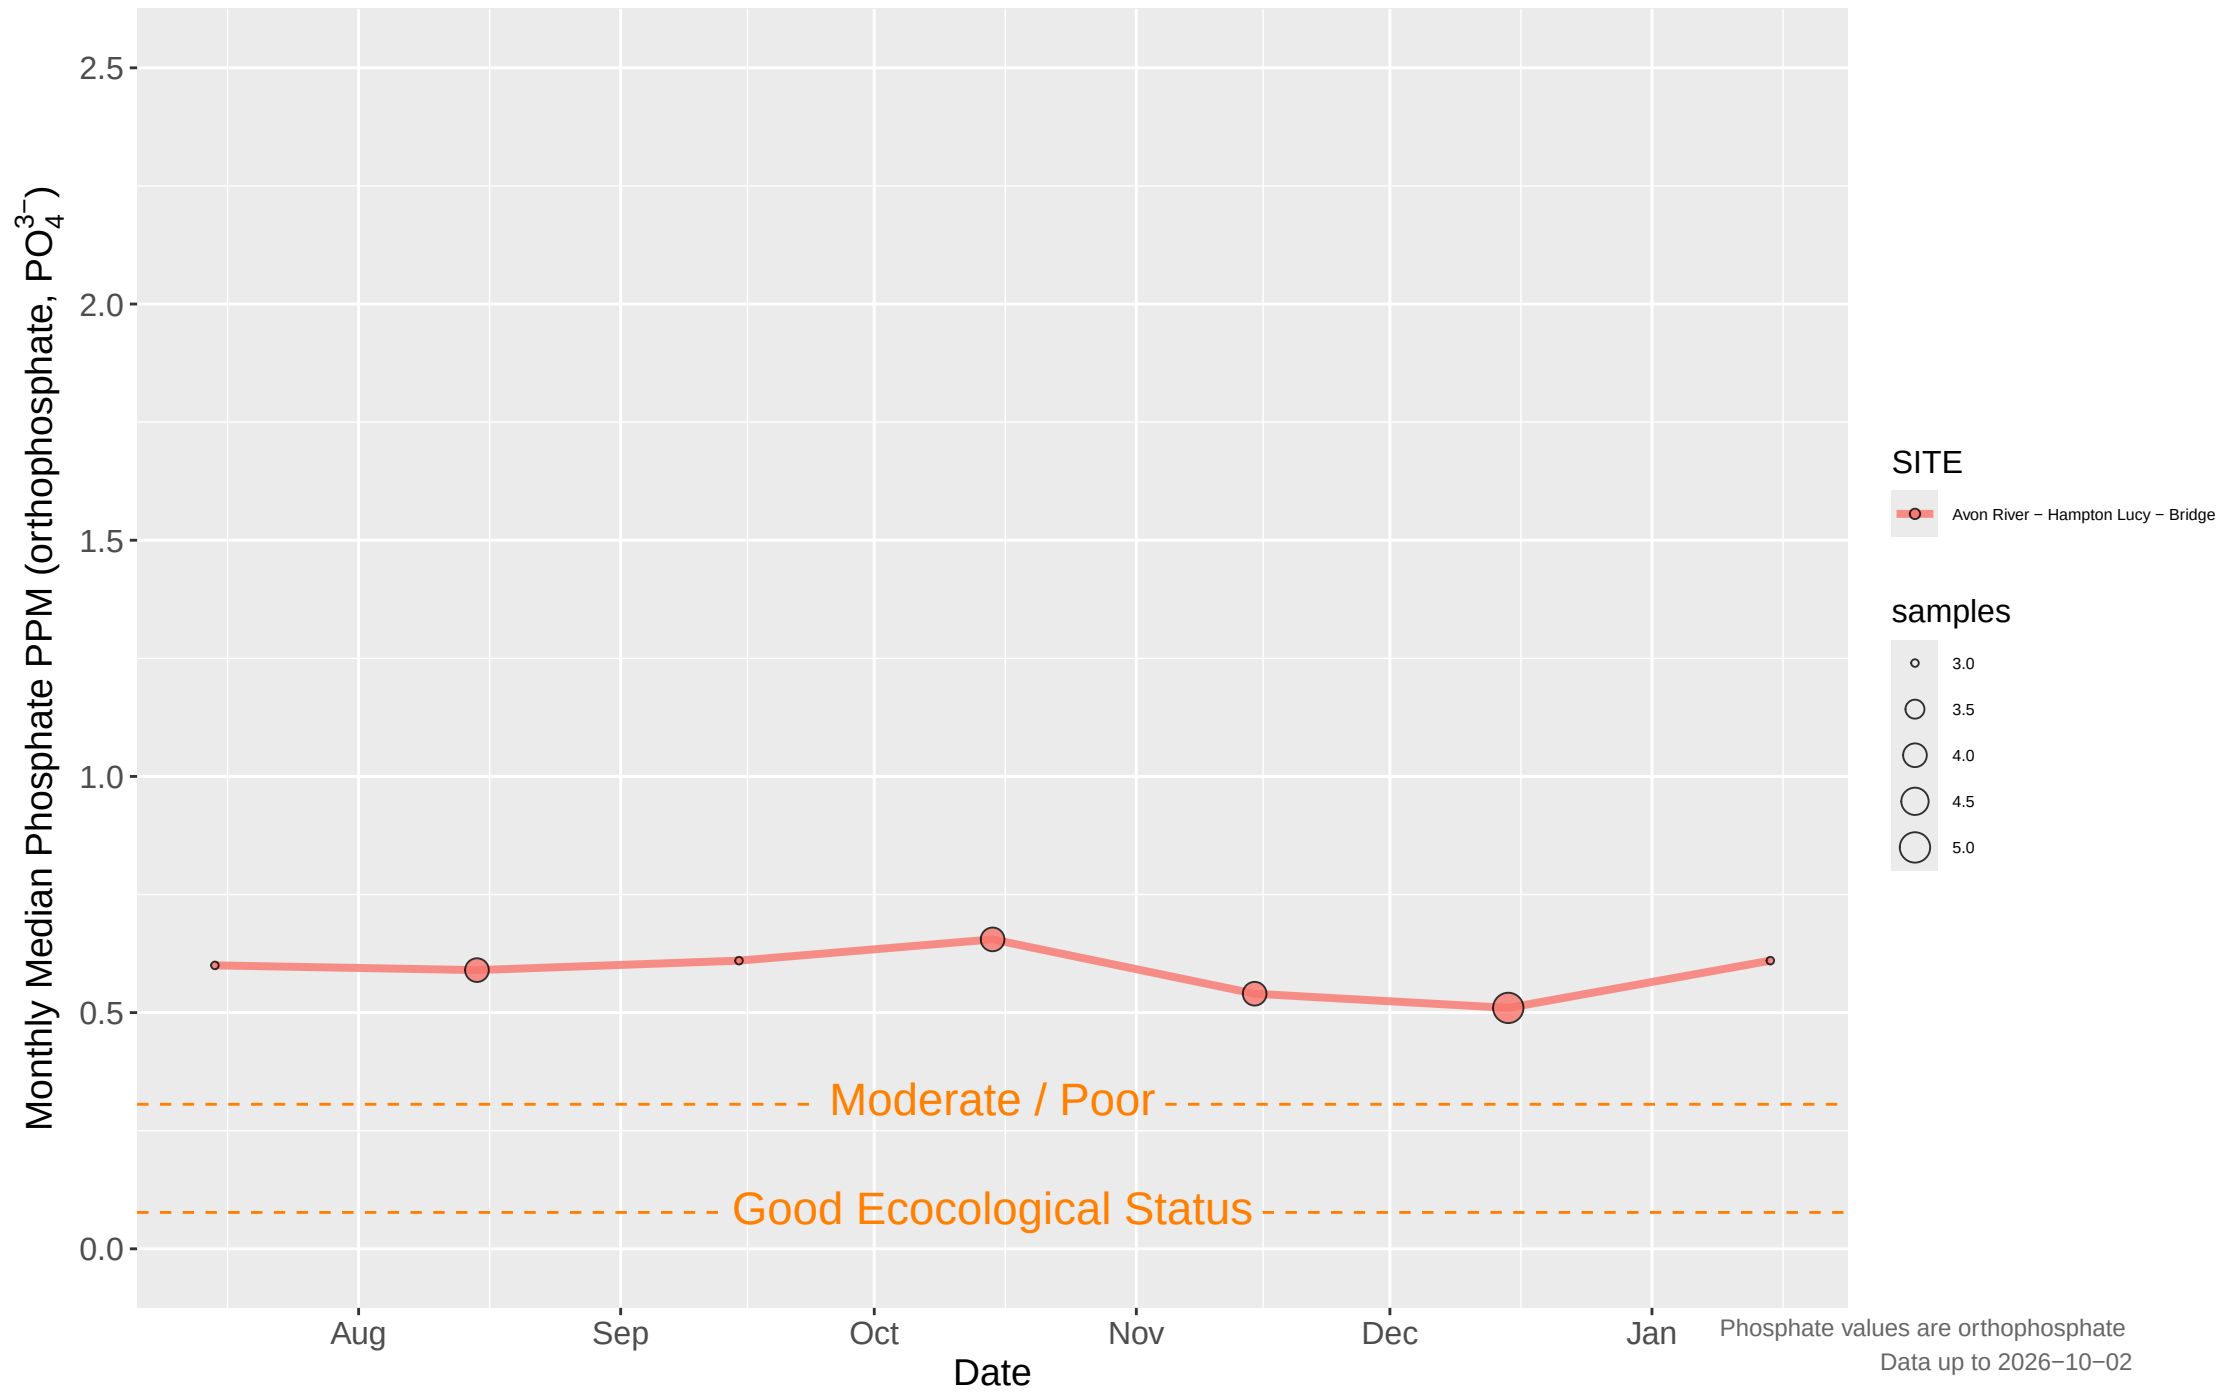


Site: Avon River – Hampton Lucy – Bridge

Start Date: 2023-07-16 | Most Recent: 2024-01-21 | Total Samples: 26 | Distinct Volunteers: 1

Season	Count		Phos Min	Phos Med	Phos Max		Nitr Min	Nitr Med	Nitr Max		EC Min	EC Med	EC Max		Temp Min	Temp Med	Temp Max
Summer 23	7		0.49	0.60	0.70		5	5	10		704	840	948		17.7	19.4	22.1
Autumn 23	11		0.44	0.60	0.90		2	5	10		506	812	964		7.7	12.6	21.6
Winter 23-24	8		0.40	0.52	0.69		5	10	20		486	726	876		6.3	8.4	11.4


SafeAvon Phosphates – Individual Readings

Avon River – Hampton Lucy – Bridge

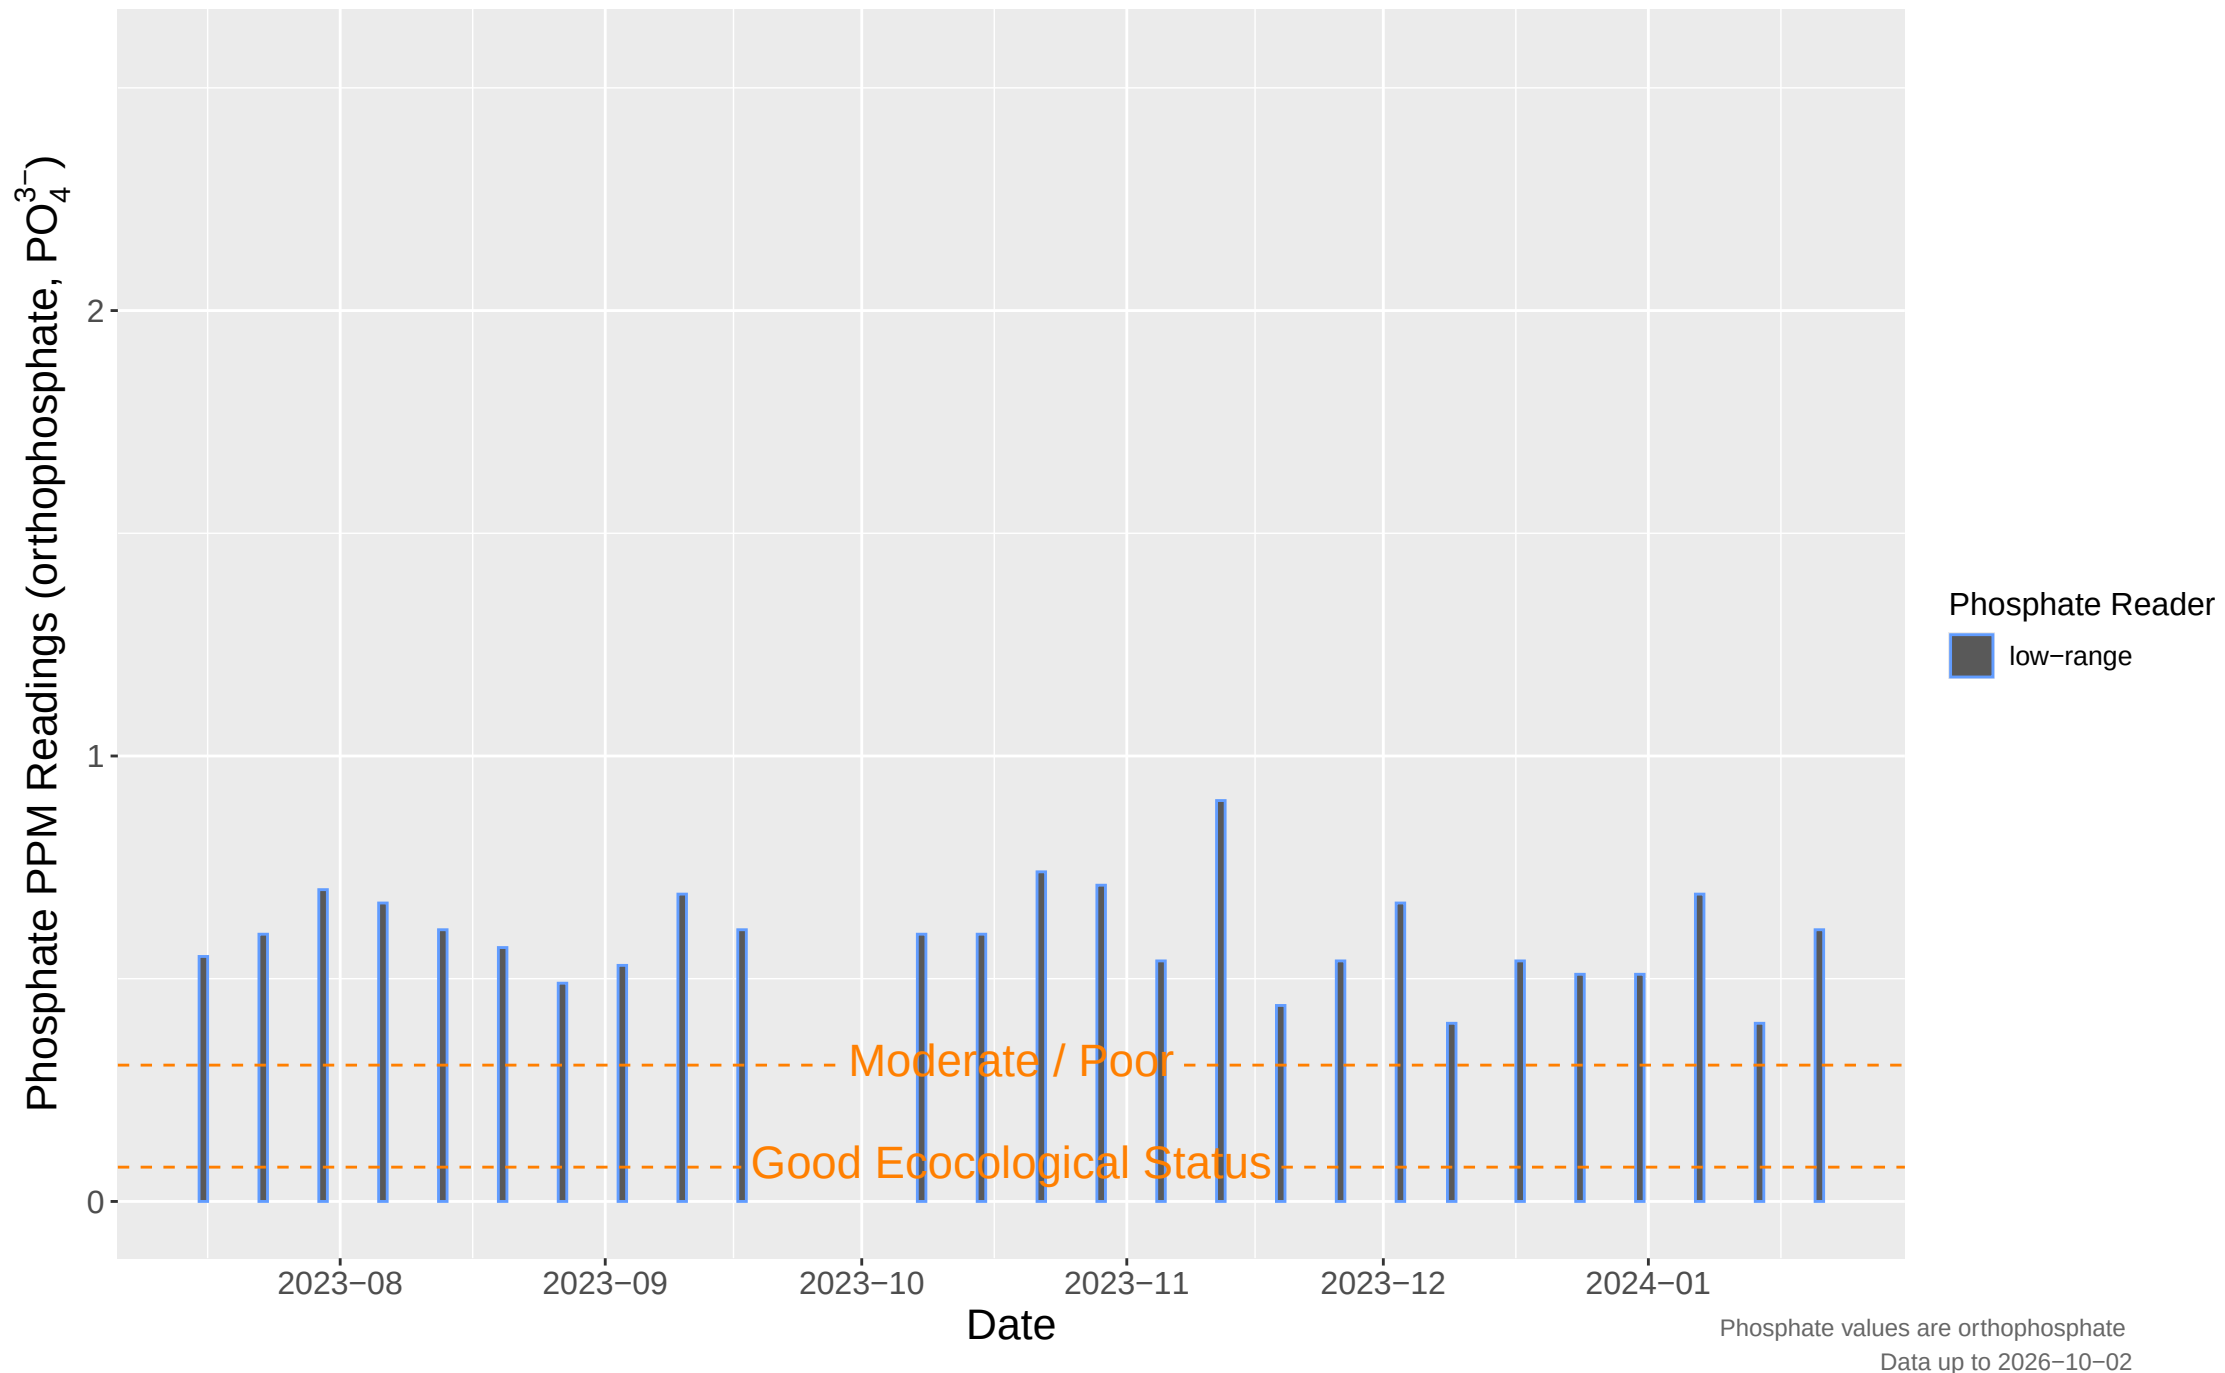

SafeAvon Phosphates – By Month


Avon River – Hampton Lucy – Bridge

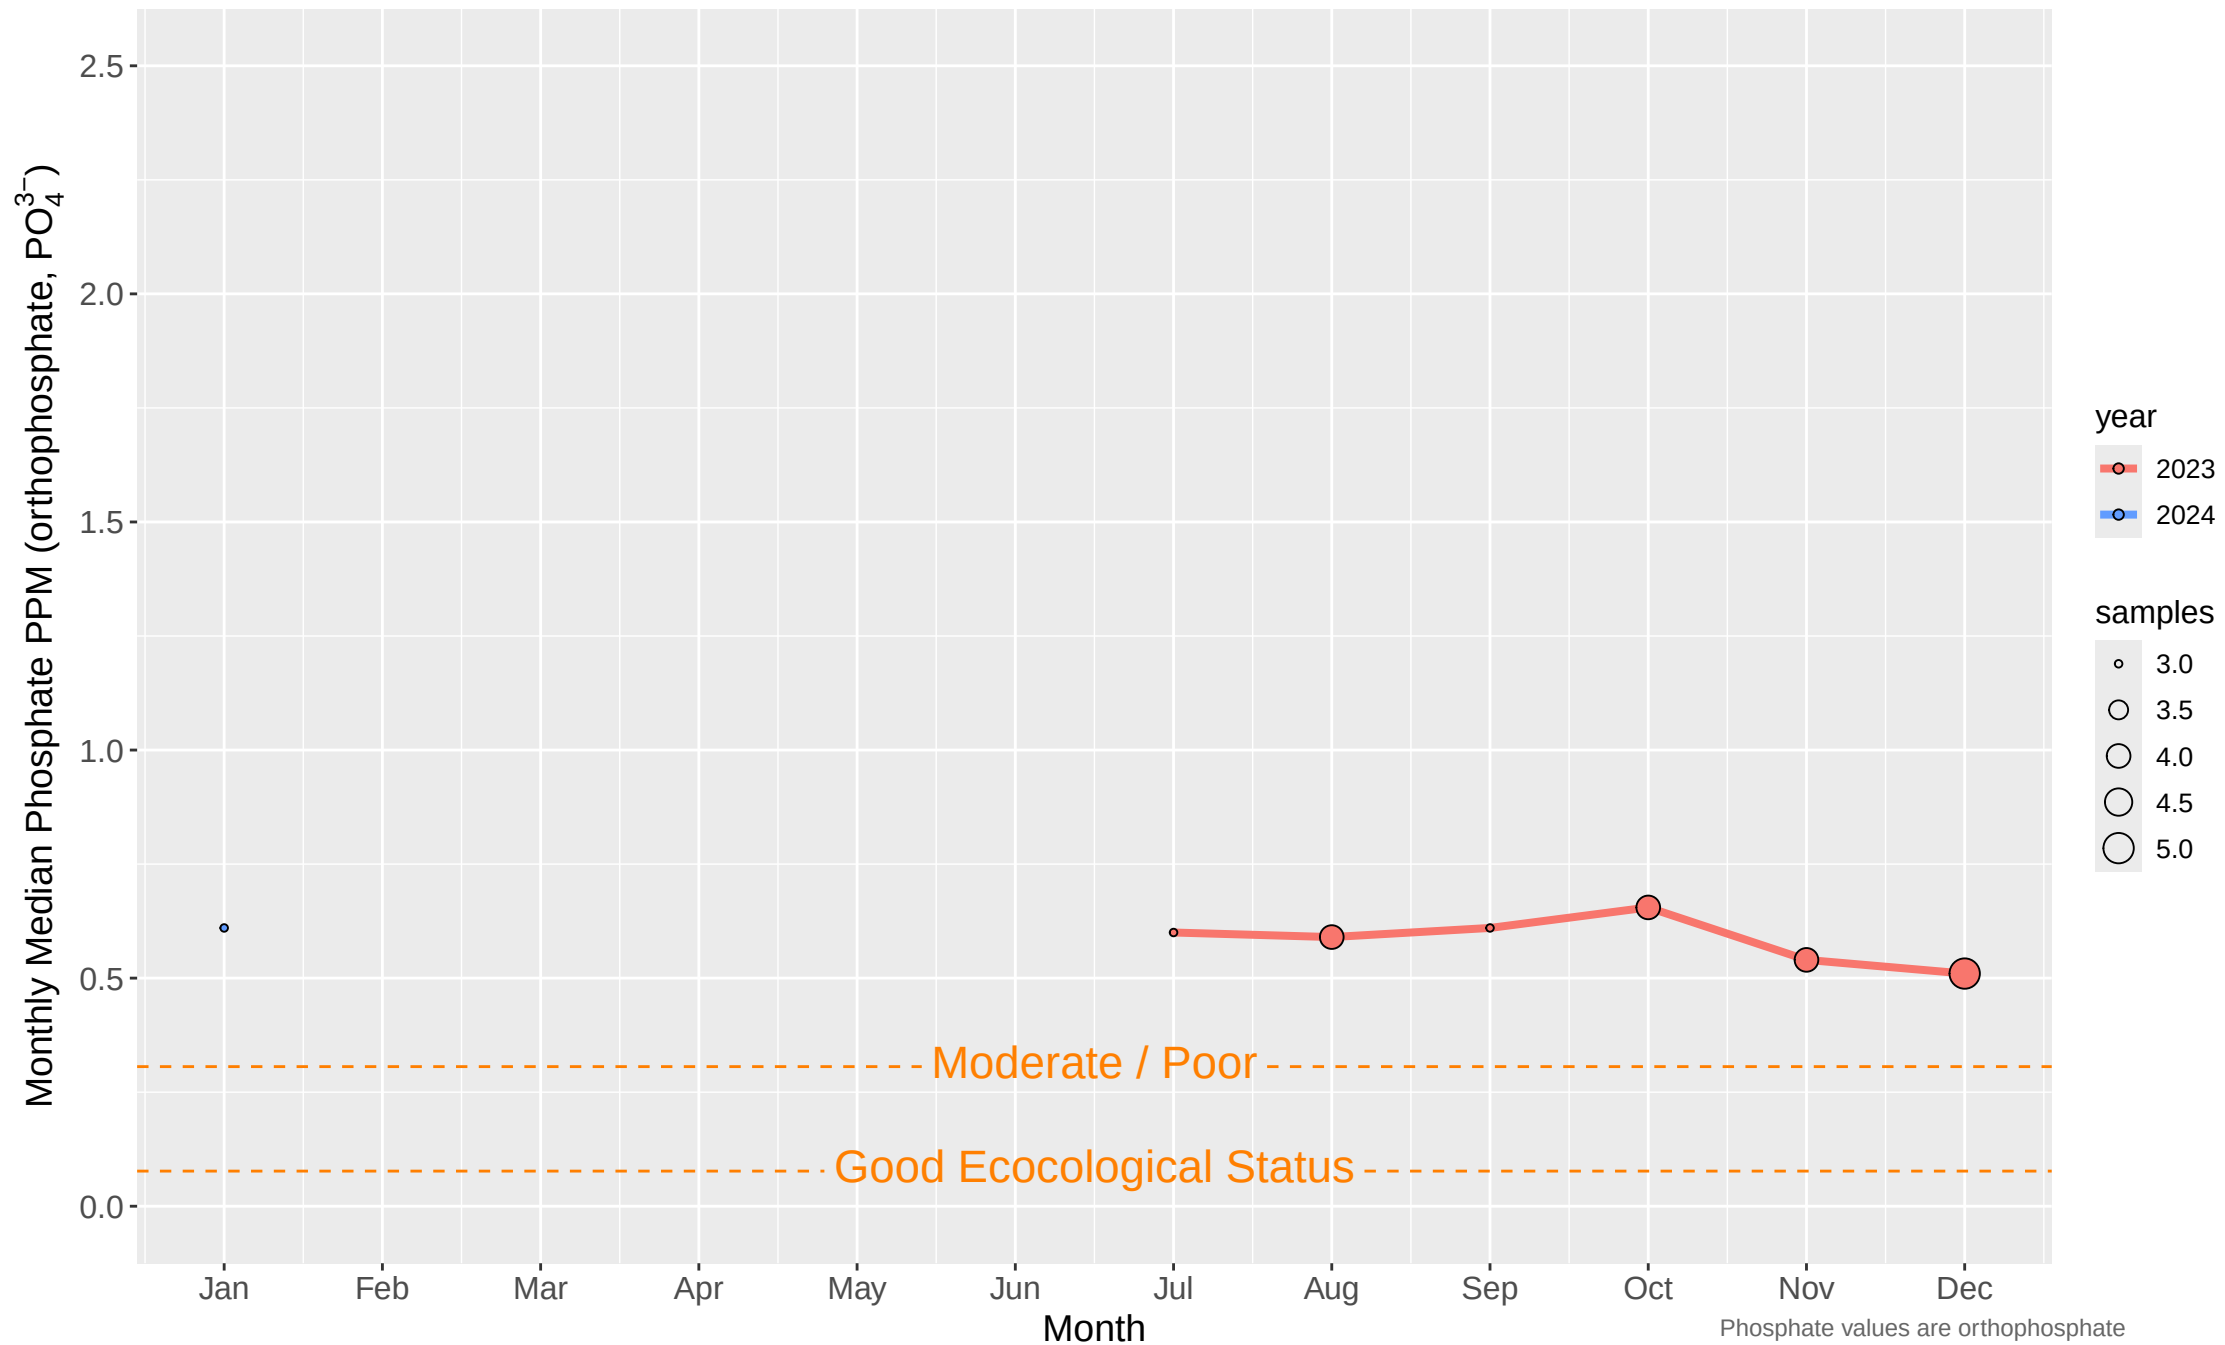

Phosphate values are orthophosphate
Data up to 2026-10-02


SafeAvon Nitrates By Month

Avon River – Hampton Lucy – Bridge

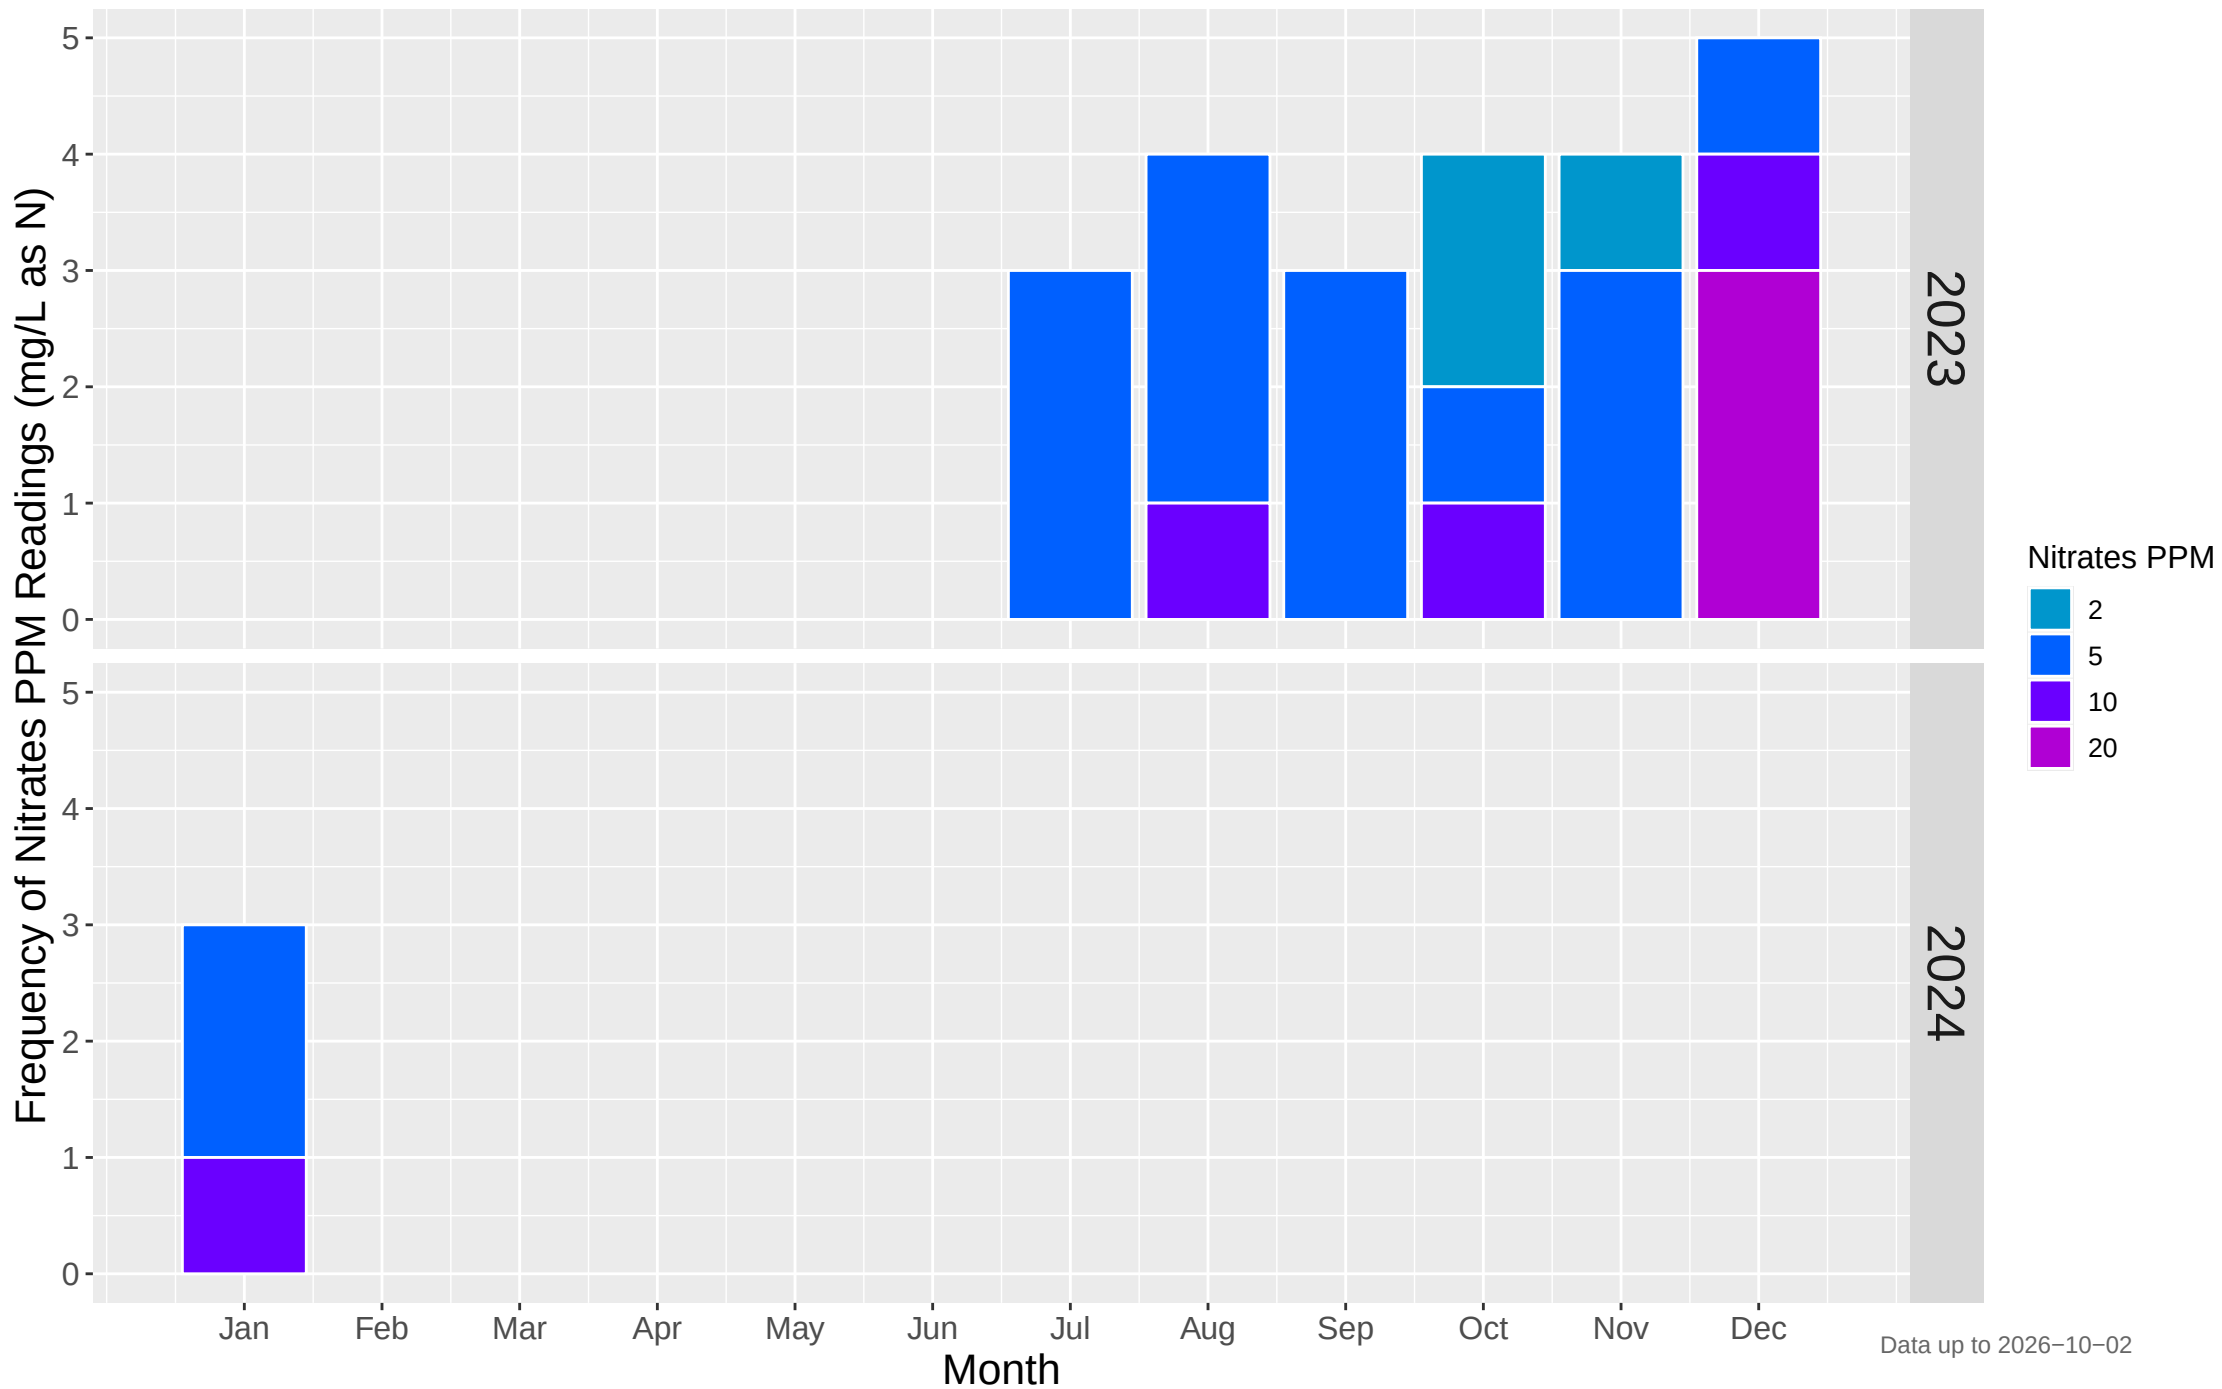

Pairwise Testing Variables Relationships

Avon River – Hampton Lucy – Bridge

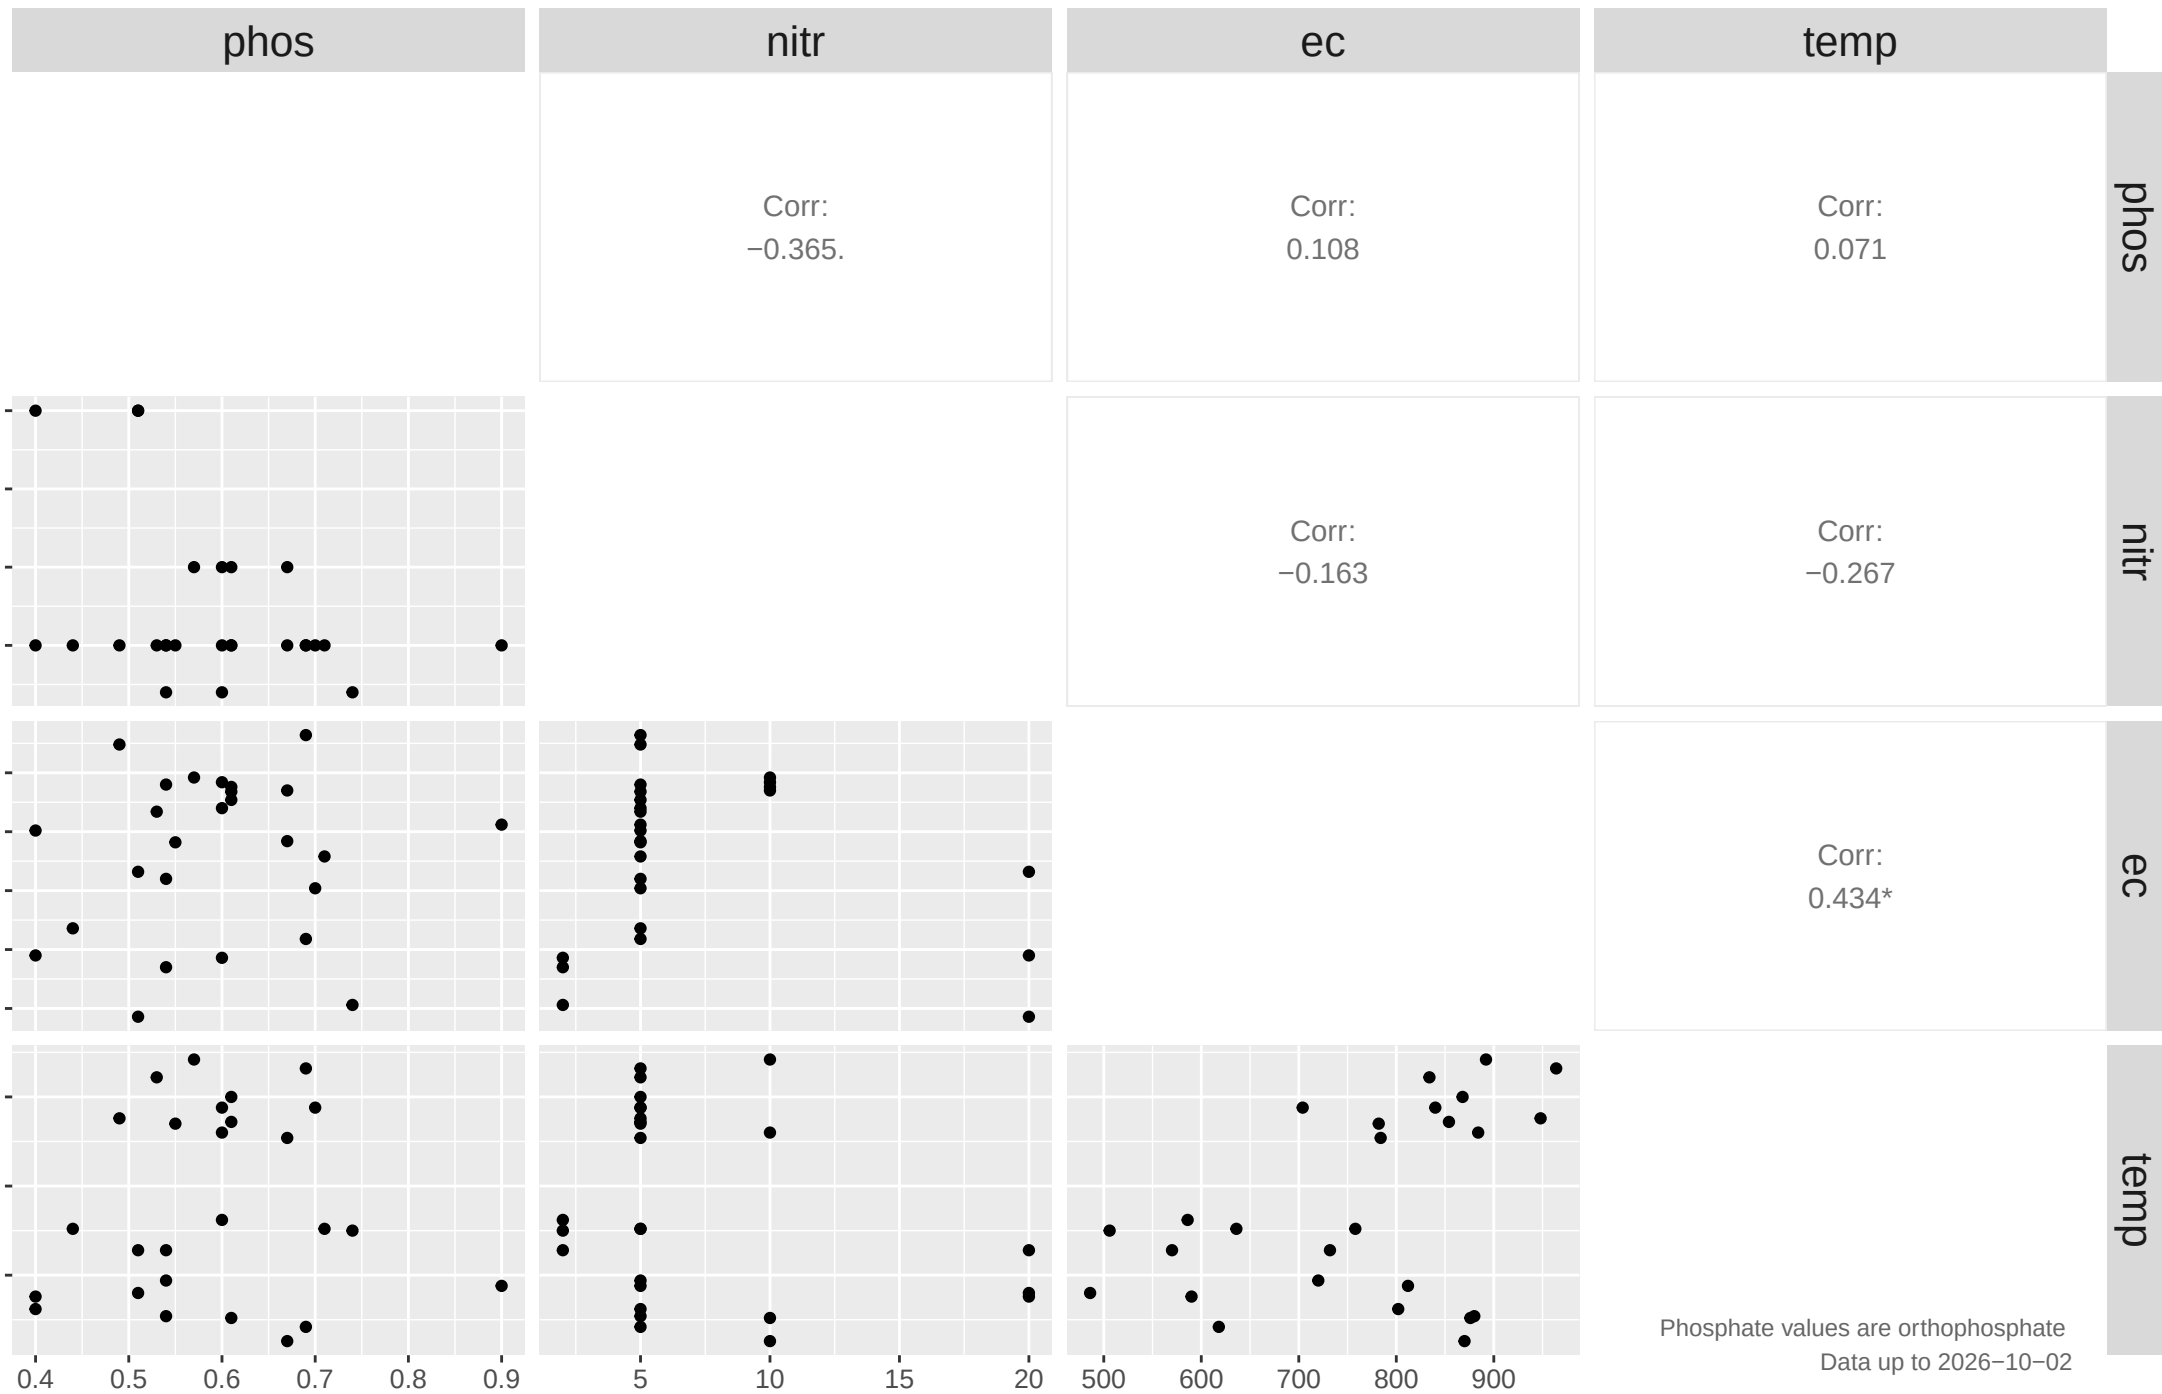

Report Glossary & Interpretation Guide

Understanding the Charts

Pairwise Correlation Matrices

- . Valuation Scale (–1 to +1): Quantifies correlation between variables.
- (+1) Perfect Positive Correlation: Variables track each other; if one scales up, the other increases.
- (0) No Correlation: Variable movements appear independent.
- (–1) Perfect Negative Correlation: Variables track inversely; when one scales up, the other drops.
- . Practical Application: If a pair of variables have a correlation approaching 1, it demonstrates that typically on any given sample, these values are likely to be strongly correlated. This indicates they may share similar sources and/or similar ways of exiting out into the watercourse.

Ecological Threshold Frameworks

Phosphate Status (Orthophosphate, PO₄^{3–})

- Monitored using Hanna pocket checker:
- . High Status: $x < 0.077$ PPM
 - . Good Ecological Status: $0.077 \leq x \leq 0.306$ PPM
 - . Moderate / Poor Ecological Status: $x > 0.306$ PPM

Nitrate Levels (Nitrate-as-N)

- Monitored using WaterWorks/Hach Nitrate kit:
- . Natural Levels: $x < 1.0$ PPM
 - . Elevated Levels: $1.0 \leq x < 5.0$ PPM
 - . Excessive Levels: $x \geq 5.0$ PPM

Data Access

Data pulled from EpiCollect API.
Full dataset accessible via SafeAvon website which has links to EpiCollect and the Google Sheet.
URL: https://safeavon.org.uk/?page_id=151